

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER	DESCRIPTION
473048	FUEL SUMMATION UNIT
749704	PANEL ASSY
762370	TANK UNITS
766658	TANK UNITS
768128	TANK UNITS
768129	TANK UNITS
794218	TANK UNITS
794325	TANK UNITS
794356	TANK UNITS
794613	TANK UNITS
794614	TANK UNITS
794615	TANK UNITS
003-001-003	FI JUNCTION PROBE
003-001-005	FI JUNCTION PROBE
010-002-005	FUEL QTY TANK UNIT
010-002-006	FUEL QTY TANK UNIT
010-002-007	FUEL QTY TANK UNIT
011-001-001	FUEL QTY TANK UNIT
011-001-002	FUEL QTY TANK UNIT
020-016-001	FUEL QTY TANK UNIT
020-016-002	FUEL QTY TANK UNIT
020-016-003	FUEL QTY TANK UNIT
020-016-004	FUEL QTY TANK UNIT
020-016-005	FUEL QTY TANK UNIT
020-016-005	FUEL QTY TANK UNIT
020-016-006	FUEL QTY TANK UNIT
020-016-007	FUEL QTY TANK UNIT
020-016-008	FUEL QTY TANK UNIT
020-016-009	FUEL QTY TANK UNIT
020-016-010	FUEL QTY TANK UNIT
020-016-011	FUEL QTY TANK UNIT
020-016-012	FUEL QTY TANK UNIT
020-016-013	FUEL QTY TANK UNIT
020-016-014	FUEL QTY TANK UNIT
020-016-015	FUEL QTY TANK UNIT

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

020-016-016	FUEL QTY TANK UNIT
020-016-017	FUEL QTY TANK UNIT
020-016-018	FUEL QTY TANK UNIT
020-016-019	FUEL QTY TANK UNIT
020-016-020	FUEL QTY TANK UNIT
020-016-021	FUEL QTY TANK UNIT
020-016-022	FUEL QTY TANK UNIT
020-016-023	FUEL QTY TANK UNIT
020-016-024	FUEL QTY TANK UNIT
020-016-030	FUEL QTY TANK UNIT
020-016-031	FUEL QTY TANK UNIT
020-016-033	FUEL QTY TANK UNIT
020-016-034	FUEL QTY TANK UNIT
020-016-035	FUEL QTY TANK UNIT
020-016-035M	FUEL QTY TANK UNIT
020-016-036M	FUEL QTY TANK UNIT
020-016-037	FUEL QTY TANK UNIT
020-016-037	FUEL QTY TANK UNIT
020-016-037M	FUEL QTY TANK UNIT
020-016-038	FUEL QTY TANK UNIT
020-016-038M	FUEL QTY TANK UNIT
020-016-083	FUEL QTY TANK UNIT
020-016-084	FUEL QTY TANK UNIT
020-016-087	FUEL QTY TANK UNIT
020-016-088	FUEL QTY TANK UNIT
020-016-101	FUEL QTY TANK UNIT
020-016-102	FUEL QTY TANK UNIT
020-016-103	FUEL QTY TANK UNIT
020-016-104	FUEL QTY TANK UNIT
020-016-105	FUEL QTY TANK UNIT
020-016-106	FUEL QTY TANK UNIT
020-016-107	FUEL QTY TANK UNIT
020-016-108	FUEL QTY TANK UNIT
020-016-109	FUEL QTY TANK UNIT
020-016-110	FUEL QTY TANK UNIT

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

020-016-111	FUEL QTY TANK UNIT
020-016-112	FUEL QTY TANK UNIT
020-016-113	FUEL QTY TANK UNIT
020-016-114	FUEL QTY TANK UNIT
020-016-115	FUEL QTY TANK UNIT
020-016-116	FUEL QTY TANK UNIT
020-016-117	FUEL QTY TANK UNIT
020-016-121	FUEL QTY TANK UNIT
020-016-122	FUEL QTY TANK UNIT
020-016-123	FUEL QTY TANK UNIT
020-016-124	FUEL QTY TANK UNIT
0212KTU/01	TANK UNIT
0212KTU/03	TANK UNIT
0212KTU/03	TANK UNIT
0212KTU/04	TANK UNIT
0212KTU/04	TANK UNIT
0212KTU/04	TANK UNIT
0212KTU/04	TANK UNIT
0212KTU/05	TANK UNIT
0212KTU/05	TANK UNIT
0212KTU/06	TANK UNIT
0212KTU/06	TANK UNIT
0212KTU/07	TANK UNIT
0212KTU/08	TANK UNIT
0212KTU/09	TANK UNIT
0212KTU/10	TANK UNIT
0212KTU/10	TANK UNIT
0212KTU/11	TANK UNIT
0212KTU/13	TANK UNIT
0212KTU/14	TANK UNIT
0212KTU/14	TANK UNIT
0212KTU/15	TANK UNIT
0212KTU/15	TANK UNIT
0212KTU/15	TANK UNIT
0212KTU/16	TANK UNIT

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

0212KTU/16	TANK UNIT
0212KTU/17	TANK UNIT
0212KTU01	TANK UNIT
0212KTU01	TANK UNIT
0212KTU-01	TANK UNIT
0212KTU-01	TANK UNIT
0212KTU-01	TANK UNIT
0212KTU03	TANK UNIT
0212KTU03	TANK UNIT
0212KTU-03	TANK UNIT
0212KTU04	TANK UNIT
0212KTU04	TANK UNIT
0212KTU-04	TANK UNIT
0212KTU05	TANK UNIT
0212KTU05	TANK UNIT
0212KTU05	TANK UNIT
0212KTU05	TANK UNIT
0212KTU-05	TANK UNIT
0212KTU06	TANK UNIT
0212KTU06	TANK UNIT
0212KTU06	TANK UNIT
0212KTU-06	TANK UNIT
0212KTU-06	TANK UNIT
0212KTU07	TANK UNIT
0212KTU07	TANK UNIT
0212KTU-07	TANK UNIT
0212KTU-07	TANK UNIT
0212KTU-07	TANK UNIT
0212KTU08	TANK UNIT
0212KTU08	TANK UNIT
0212KTU08	TANK UNIT
0212KTU-08	TANK UNIT
0212KTU-08	TANK UNIT
0212KTU09	TANK UNIT
0212KTU-09	TANK UNIT

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

0212KTU-09	TANK UNIT
0212KTU-09	TANK UNIT
0212KTU-09	TANK UNIT
0212KTU10	TANK UNIT
0212KTU10	TANK UNIT
0212KTU-10	TANK UNIT
0212KTU-10	TANK UNIT
0212KTU11	TANK UNIT
0212KTU11	TANK UNIT
0212KTU-11	TANK UNIT
0212KTU-11	TANK UNIT
0212KTU13	TANK UNIT
0212KTU13	TANK UNIT
0212KTU13	TANK UNIT
0212KTU-13	TANK UNIT
0212KTU14	TANK UNIT
0212KTU-14	TANK UNIT
0212KTU-14	TANK UNIT
0212KTU-14	TANK UNIT
0212KTU15	TANK UNIT
0212KTU15	TANK UNIT
0212KTU-15	TANK UNIT
0212KTU-15	TANK UNIT
0212KTU16	TANK UNIT
0212KTU16	TANK UNIT
0212KTU-16	TANK UNIT
0212KTU-16	TANK UNIT
0212KTU17	TANK UNIT
0212KTU17	TANK UNIT
0212KTU-17	TANK UNIT
0212KTU-17	TANK UNIT
0212KTU22	TANK UNIT
0212KTU-22	TANK UNIT
0212KTU-23	TANK UNIT
0212KTU-24	TANK UNIT

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

0212KTU-25	TANK UNIT
0212KTU-26	TANK UNIT
050-022-001	COMPENSATOR
053-001-001	FUEL QTY COMPENSATOR
053-002-001	FUEL QTY COMPENSATOR
058048-1	CASE ASSEMBLY
058048-1GL	GLASS
058048-1VT	CASE ASSY
1.1317.AB	FUEL LEVEL TRNSMTTR
1.1317-01	FUEL LEVEL TRNSMTTR
10010-0000-02	FUEL QTY INDICATOR
10013-0000-02	FUEL QTY PRIM IND
10014-0000-02	FUEL QTY REPEATER
10035-2000-02	COMPUTERIZED FUEL
10035-2000-03	COMPUTERIZED FUEL
10037-0750	FUEL QTY IND.
10037-0770	PRESELECT INDCTR
10037-1000-0151	FUEL QTY INDICATOR
10037-1000-0152	FUEL QTY INDICATOR
10037-1000-0153	FUEL QTY INDICATOR
10037-1000-0154	FUEL QTY INDICATOR
10037-1000-0155	FUEL QTY INDICATOR
10037-1000-0156	FUEL QTY INDICATOR
10037-1000-0158	FUEL QTY INDICATOR
10037-1000-0159	FUEL QTY INDICATOR
10037-1000-0160	FUEL QTY INDICATOR
10037-1000-0161	FUEL QTY INDICATOR
10037-1000-0162	FUEL QTY INDICATOR
10037-1000-0164	FUEL QTY INDICATOR
10037-1300-0750	HOUSING
10037-1310-0772	HOUSING ASSEMBLY□
10044-0000-01	FUEL QTY INDICATOR
10048-0000-01	FUEL QTY PRIM IND
10065-1000-0202	FUEL QTY INDICATOR
10065-1000-0303	FUEL QTY INDICATOR

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER	DESCRIPTION
10065-1000-0403	FUEL QTY INDICATOR
10065-1000-0505	FUEL QTY INDICATOR
10065-2000-0202	PROCESSOR
10065-2000-0303	PROCESSOR
10065-2000-0304	PROCESSOR
10065-2000-0405	PROCESSOR
10065-2000-0405	PROCESSOR
10065-2000-0506	PROCESSOR
10065-2022-02	CHASSIS ASSY
10065-2022-03	CHASSIS ASSEMBLY
10065-2022-03	CHASSIS ASSEMBLY
10065-2022-04	CHASSIS ASSY
10065-2403-02	FUELING RELAY MODULE□
10065-2411-03	VTO CARD
10065-2470-0202	FUEL QTY (IFQC) ASSY
10065-2470-0304	FUEL QTY (IFQC) ASSY
10065-2470-0405	FUEL QTY (IFQC) ASSY
10065-2470-0405	FUEL QTY (IFQC) ASSY
10065-2470-0405	FUEL QTY (IFQC) ASSY
10065-2470-0406	FUEL QTY (IFQC) ASSY
10065-2470-0407	INDIVIDUAL FUEL QTY CHANNEL
10065-2471-0202	INPUT/OUTPUT CHANNEL
10065-2471-0303	INPUT/OUTPUT CHANNEL
10065-2471-0404	INPUT/OUTPUT CHANNEL
10065-2471-0404	INPUT/OUTPUT CHANNEL
10065-2471-0405	INPUT/OUTPUT CHANNEL
10065-2471-0406	INPUT/OUTPUT CHANNEL (I/OC) ASSY
10065-3000-01	PRESELECT CNTRL UNIT
10065-3000-02	PRESELECT CNTRL UNIT
10065-5000-01	DENSITOMETER ASSY
10065-5000-02	DENSITOMETER ASSY
10078-0101	LOAD SELECT IND
10079-01	LOAD SELECT CNTRL
10080-0101	FUEL QTY IND. MODULE
10080-0201	FUEL QTY IND. MODULE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER

DESCRIPTION

10080-0201	FUEL QTY IND. MODULE
10250N01F01	F/F F/U INDICATOR
10-60522-	MEASURING STICK FUEL LEVEL
10-61219-121	LIQ QTY COMPENSATOR
10-61219-17	LIQ QTY TRANSMITTER
10-61219-18	LIQ QTY TRANSMITTER
1-1306-04	FUEL QTY INDICATOR
1-1317-01	FUEL LEVEL TRNSMTTR
1-1317AB	FUEL LEVEL TRNSMTTR
1-1317-AB	FUEL LEVEL TRNSMTTR
1140-0110-2	FLEXI-STICK ASSY
1140-0110-212	FLEXI-STICK ASSY
1140-0110-214	FLEXI-STICK ASSY
1140-0110-216	FLEXI-STICK ASSY
1140-0110-220	FLEXI-STICK ASSY
1140-0110-25	FLEXI-STICK ASSY
1140-0110-26	FLEXI-STICK ASSY
1140-0110-28	FLEXI-STICK ASSY
1140-0110-3	FLEXI-STICK ASSY
1140-0110-311	FLEXI-STICK ASSY
1140-0110-315	FLEXI-STICK ASSY
1140-0110-34	FLEXI-STICK ASSY
1140-0110-4	FLEXI-STICK ASSY
1140-0110-5	FLEXI-STICK ASSY
1140-0110-6	FLEXI-STICK ASSY
1140-0110-7	FLEXI-STICK ASSY
1140-0110-8	FLEXI-STICK ASSY
1140-0111-1	MEASURING STICK FUEL
1140-0174-1	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-10	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-11	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-12	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-2	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-3	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-4	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER

DESCRIPTION

1140-0174-5	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-6	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-7	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-8	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0174-9	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
1140-0183-1	FLEXI-STICK ASSY
1140-0183-2	FLEXI-STICK ASSY
1140-0183-3	FLEXI-STICK ASSY
1140-0183-4	FLEXI-STICK ASSY
1140-0183-5	FLEXI-STICK ASSY
1140-0183-6	FLEXI-STICK ASSY
1140-0183-7	FLEXI-STICK ASSY
1140-0183-8	FLEXI-STICK ASSY
1140-0183-9	FLEXI-STICK ASSY
1407KID-02-03	FUEL QTY INDICATOR
1407KID-02-03	FUEL QTY INDICATOR
1412KID02-03	FUEL QTY INDICATOR
1422KID02-03	FUEL QTY INDICATOR
1423KID02-03	FUEL QTY INDICATOR
20022-0000-0101	FUEL QTY TANK UNIT
20022-0000-0102	FUEL QTY TANK UNIT
20022-0000-0103	FUEL QTY TANK UNIT
20022-0000-0104	FUEL QTY TANK UNIT
20022-0000-0105	FUEL QTY TANK UNIT
20022-0000-0106	FUEL QTY TANK UNIT
20022-0000-0107	FUEL QTY TANK UNIT
20022-0000-0108	FUEL QTY TANK UNIT
20067-0000-0101	FUEL QTY TANK UNIT
20068-0000-0101	TANK UNITS DHC-8 LR
20079-0000-0101	FUEL QTY TRANSMITTER
20079-0000-0102	FUEL QTY TRANSMITTER
20079-0000-0103	FUEL QTY TRANSMITTER
20079-0000-0104	FUEL QTY TRANSMITTER
20079-0000-0105	FUEL QTY TRANSMITTER
20079-0000-0106	FUEL QTY TRANSMITTER

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

20079-0000-0107	FUEL QTY TRANSMITTER
20079-0000-0108	FUEL QTY TRANSMITTER
20079-0000-0109	FUEL QTY TRANSMITTER
20079-0000-0110	FUEL QTY TRANSMITTER
20079-0000-0112	FUEL QTY TRANSMITTER
20079-0000-0113	FUEL QTY TRANSMITTER
20079-0000-0114	FUEL QTY TRANSMITTER
20079-0000-0115	FUEL QTY TRANSMITTER
20079-0000-0116	FUEL QTY TRANSMITTER
20079-0000-0117	FUEL QTY TRANSMITTER
20079-0000-0119	FUEL QTY TRANSMITTER
20079-0000-0120	FUEL QTY TRANSMITTER
20079-0000-0121	FUEL QTY TRANSMITTER
20079-0000-0124	FUEL QTY TRANSMITTER
20079-0000-0125	FUEL QTY TRANSMITTER
20079-0000-0128	FUEL QTY TRANSMITTER
20079-0000-0129	FUEL QTY TRANSMITTER
20079-0000-0130	FUEL QTY TRANSMITTER
20079-0000-0131	FUEL QTY TRANSMITTER
20079-0000-0132	FUEL QTY TRANSMITTER
20079-0000-0133	FUEL QTY TRANSMITTER
20079-0000-0134	FUEL QTY TRANSMITTER
20079-0000-0135	FUEL QTY TRANSMITTER
20079-0000-0136	FUEL QTY TRANSMITTER
20079-0000-0137	FUEL QTY TRANSMITTER
20079-0000-0138	FUEL QTY TRANSMITTER
20079-0000-0139	FUEL QTY TRANSMITTER
20081-0000-0201	COMPENSATOR
20081-0000-0201	COMPENSATOR
20081-0000-0202	COMPENSATOR
20081-0000-0202	COMPENSATOR
20096-0101	FUEL PROBE
20096-0101	FUEL PROBE
20096-0202	FUEL PROBE
20096-0202	FUEL PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

20096-0203	FUEL PROBE
20096-0203	FUEL PROBE
20128-0101	FUEL QTY TANK UNITS
20128-0103	FUEL QTY TANK UNITS
20128-0104	FUEL QTY TANK UNITS
20128-0105	FUEL QTY TANK UNITS
20128-0107	FUEL QTY TANK UNITS
20128-0108	FUEL QTY TANK UNITS
20128-0109	FUEL QTY TANK UNITS
20128-0110	FUEL QTY TANK UNITS
20128-0112	FUEL QTY TANK UNITS
20128-0113	FUEL QTY TANK UNITS
20128-0115	FUEL QTY TANK UNITS
20128-0116	FUEL QTY TANK UNITS
20128-0117	FUEL QTY TANK UNITS
20128-0118	FUEL QTY TANK UNITS
20128-0121	FUEL QTY TANK UNITS
20128-0122	FUEL QTY TANK UNITS
20128-0123	FUEL QTY TANK UNITS
20128-0124	FUEL QTY TANK UNITS
20128-0125	FUEL QTY TANK UNITS
20128-0127	FUEL QTY TANK UNITS
20128-0129	FUEL QTY TANK UNITS
20128-0130	FUEL QTY TANK UNITS
20128-0131	FUEL QTY TANK UNITS
20128-0132	FUEL QTY TANK UNITS
20130-0101	FUEL PROBE
20130-0101	FUEL PROBE
20130-0102	FUEL PROBE
20130-0102	FUEL PROBE
20130-0103	FUEL PROBE
20130-0103	FUEL PROBE
20130-0104	FUEL PROBE
20130-0104	FUEL PROBE
20130-0105	FUEL PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

20130-0105	FUEL PROBE
20130-0106	FUEL PROBE
20130-0106	FUEL PROBE
20130-0107	FUEL PROBE
20130-0107	FUEL PROBE
20130-0108	FUEL PROBE
20130-0108	FUEL PROBE
20130-0109	FUEL PROBE
20130-0109	FUEL PROBE
20130-0110	FUEL PROBE
20130-0110	FUEL PROBE
20130-0111	FUEL PROBE
20130-0111	FUEL PROBE
20130-0112	FUEL PROBE
20130-0112	FUEL PROBE
20130-0113	FUEL PROBE
20130-0113	FUEL PROBE
20130-0114	FUEL PROBE
20130-0114	FUEL PROBE
20130-0116	FUEL PROBE
20130-0116	FUEL PROBE
20130-0119	FUEL PROBE
20130-0119	FUEL PROBE
20130-0215	FUEL PROBE
20130-0215	FUEL PROBE
20130-0218	FUEL PROBE
20130-0218	FUEL PROBE
20145-0101	FUEL PROBE
20145-0102	FUEL PROBE
20146-0101	FUEL PROBE
20146-0102	FUEL PROBE
20146-0103	FUEL PROBE
20146-0104	FUEL PROBE
20146-0105	FUEL PROBE
20146-0106	FUEL PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

20146-0107	FUEL PROBE
20146-0108	FUEL PROBE
20146-0109	FUEL PROBE
20146-0110	FUEL PROBE
20147-0101	FUEL PROBE
20147-0102	FUEL PROBE
20147-0103	FUEL PROBE
20147-0103	FUEL PROBE
20151-0109	FUEL PROBE INTERNALLY MOUNTED INSULATED
20200-0103	TANK UNITS
20200-0104	TANK UNITS
20200-0115	TANK UNITS
20200-0202	TANK UNITS
20200-0205	TANK UNITS
20200-0206	TANK UNITS
20200-0207	TANK UNITS
20200-0208	TANK UNITS
20200-0209	TANK UNITS
20200-0210	TANK UNITS
20200-0211	TANK UNITS
20200-0212	TANK UNITS
20200-0213	TANK UNITS
20200-0214	TANK UNITS
20200-0216	TANK UNITS
20202-01	COMPENSATOR
20202-02	COMPENSATOR
20400-0111	FUEL PROBE
211-001-001	FUEL QTY REPEATER
21C1-3-21	LOW FUEL PRESSURE
21C1-3-22	LOW FUEL PRESSURE
21SN41-111	PRESSURE SWITCH
21SN41-112	PRESSURE SWITCH
21SN41-113A	PRESSURE SWITCH
30012-0000-03	FUEL QTY SIGNAL COND
30012-0000-04	FUEL QTY SIGNAL COND

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

30071-0202	PROCESSOR
30071-0404	PROCESSOR
30071-0404	PROCESSOR
30071-0505	PROCESSOR
30071-0607	PROCESSOR
30071-0607	PROCESSOR
30071-2421-0306	I/O PROGRAMMED ASSY BOARD
30128-03	FUEL QTY PROCESSOR
391041-020	LIQ QTY COMPENSATOR
391041-023	LIQ QTY COMPENSATOR
391041-026	LIQ QTY COMPENSATOR
391041-027	LIQ QTY COMPENSATOR
391041-05007	LIQ QTY COMPENSATOR
391046-04128	LIQ QTY TRANSMITTER
391046-04129	LIQ QTY TRANSMITTER
391046-04130	LIQ QTY TRANSMITTER
391046-04131	LIQ QTY TRANSMITTER
391046-04132	LIQ QTY TRANSMITTER
391046-04133	LIQ QTY TRANSMITTER
391046-04134	LIQ QTY TRANSMITTER
391046-04135	LIQ QTY TRANSMITTER
391046-04136	LIQ QTY TRANSMITTER
391046-04137	LIQ QTY TRANSMITTER
391046-04138	LIQ QTY TRANSMITTER
391046-04159	LIQ QTY TRANSMITTER
391046-04160	LIQ QTY TRANSMITTER
391046-04161	LIQ QTY TRANSMITTER
391046-04162	LIQ QTY TRANSMITTER
391046-04165	LIQ QTY TRANSMITTER
391046-05128	LIQ QTY TRANSMITTER
391046-05129	LIQ QTY TRANSMITTER
391046-05130	LIQ QTY TRANSMITTER
391046-05131	LIQ QTY TRANSMITTER
391046-05132	LIQ QTY TRANSMITTER
391046-05133	LIQ QTY TRANSMITTER

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER

DESCRIPTION

391046-05134	LIQ QTY TRANSMITTER
391046-05135	LIQ QTY TRANSMITTER
391046-05136	LIQ QTY TRANSMITTER
391046-05137	LIQ QTY TRANSMITTER
391046-05138	LIQ QTY TRANSMITTER
391046-085	LIQ QTY TRANSMITTER
391046-183	LIQ QTY TRANSMITTER
391046-299	LIQ QTY TRANSMITTER
391046-300	LIQ QTY TRANSMITTER
391046-478	LIQ QTY TRANSMITTER
391046-479	LIQ QTY TRANSMITTER
391046-480	LIQ QTY TRANSMITTER
391046-481	LIQ QTY TRANSMITTER
391046-482	LIQ QTY TRANSMITTER
391046-483	LIQ QTY TRANSMITTER
391046-484	LIQ QTY TRANSMITTER
391046-486	LIQ QTY TRANSMITTER
393026-077	FUEL QTY INDICATOR
393026-096	FUEL QTY INDICATOR
40007-0000-0101	FUEL QTY TANK UNITS
40007-0000-0102	FUEL QTY TANK UNITS
40007-0000-0103	FUEL QTY TANK UNITS
40008-0000-0101	FUEL QTY TANK UNITS
40008-0000-0102	FUEL QTY TANK UNITS
40008-0000-0103	FUEL QTY TANK UNITS
4177-0147-101	MEASURING STICK FUEL LEVEL
60B92018-10	PRESELECT CNTRL UNIT
60B92018-200	PROCESSOR
60B92018-201	CHASSIS ASSY
60B92018-202	FUEL QTY (IFQC) ASSY
60B92018-203	INPUT/OUTPUT CHANNEL
60B92018-204	FUEL QTY (IFQC) ASSY
60B92018-205	INPUT/OUTPUT CHANNEL
60B92018-207	FUEL QTY (IFQC) ASSY
60B92018-209	INPUT/OUTPUT CHANNEL

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

60B92018-210	FUEL QTY (IFQC) ASSY
60B92018-212	INDIVIDUAL FUEL QTY CHANNEL
60B92018-213	INPUT/OUTPUT CHANNEL (I/OC) ASSY
60B92018-217	PROCESSOR
60B92018-24	RELAY/LAMP DRIVER A
60B92018-26	INPUT/OUTPUT CHANNEL
60B92018-27	FUEL QTY (IFQC) ASSY
60B92018-28	RELAY/LAMP DRIVER A3
60B92018-3	FUEL QTY INDICATOR
60B92018-30	DENSITOMETER ASSY
60B92018-33	FUEL QTY INDICATOR
60B92400-7	SWITCH GAGE PRESSURE
704-771-3	TANK PROBE
704-771-4	TANK PROBE
704-772-3	TANK PROBE
704-772-4	TANK PROBE
704-773-3	TANK PROBE
704-773-4	TANK PROBE
704-774-3	TANK PROBE
704-774-4	TANK PROBE
704-775-3	TANK PROBE
704-775-4	TANK PROBE
704-776-3	TANK PROBE
704-776-4	TANK PROBE
704-777-3	TANK PROBE
704-777-4	TANK PROBE
704-777-5	TANK PROBE
704-778-3	TANK PROBE
704-778-4	TANK PROBE
704-779-3	TANK PROBE
704-779-4	TANK PROBE
704-780-3	TANK PROBE
704-780-4	TANK PROBE
704-781-3	TANK PROBE
704-781-4	TANK PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

704-782-3	TANK PROBE
704-782-4	TANK PROBE
748-465-4	FUEL QTY INDICATOR
748-465-5	FUEL QTY INDICATOR
748-522-1	FUEL QTY INDICATOR
748-681-1	FUEL QTY INDICATOR
764713-1	TANK PROBES
766-046-2	TANK PROBE
766-047-2	TANK PROBE
766-048-2	TANK PROBE
766-078-1	TANK PROBE
766-323-1	TANK UNITS
766-325-1	TANK UNITS
766-326-1	TANK UNITS
766-327-2	TANK UNITS
766-328-1	TANK UNITS
766-329-1	TANK UNITS
766-331-1	TANK UNITS
766-531	TANK PROBE
766-532	TANK PROBE
766-643	TANK PROBE
766-793-1	TANK PROBE
766-795-2	TANK PROBE
766-796-2	TANK PROBE
766-797-2	TANK PROBE
766-801-1	TANK PROBE
766-831-2	TANK PROBE
766-983-1	TANK PROBE
768-055	TANK PROBE
768094-1	PROBES
768-100	TANK PROBE
768271-2	PROBES
768272-3	PROBE
768273-2	PROBE
768274-3	PROBES

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

768282-4	PROBES
768282-4	PROBES
768283-2	PROBES
768284-2	PROBES
768-380	PROBE
768656-1	PROBES
768657-1	PROBES
768959-1	TANK PROBES
768959-2	TANK PROBES
768960-1	TANK PROBES
768960-2	TANK PROBES
768961-1	TANK PROBES
768962-2	TANK PROBES
768963-1	TANK PROBES
768963-2	TANK PROBES
768964-1	TANK PROBES
768965-1	TANK PROBES
768965-2	TANK PROBES
768966-1	TANK PROBES
768967-1	TANK PROBES
768967-2	TANK PROBES
768968-1	TANK PROBES
768969-1	TANK PROBES
790-209	TANK PROBE
790-209-1	TANK PROBE
790-210	TANK PROBE
790-210-1	TANK PROBE
790-211	TANK PROBE
790-211-1	TANK PROBE
792977-2	TANK UNITS
792977-3	FUEL PROBE
792978-2	TANK UNITS
792978-3	TANK UNITS
792979-2	TANK UNITS
792979-3	FUEL PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

792980-1	TANK UNITS
792-980-2	FUEL PROBE
792981-1	TANK UNITS
792981-2	JAUGE SA332
794218-1	TANK UNITS
794218-2	TANK UNITS
794325-1	FUEL PROBE
794356-1	TANK UNITS
794-357	TANK PROBE
794-357-1	TANK PROBE
794-358	TANK PROBE
794-358-1	TANK PROBE
794-359	TANK PROBE
794-359-1	TANK PROBE
794-360	TANK PROBE
794-360-1	TANK PROBE
794-361	TANK PROBE
794-361-1	TANK PROBE
794-362	TANK PROBE
794-362-1	TANK PROBE
794-531-2	TANK UNITS
794-536-2	TANK UNITS
794-537-2	TANK UNITS
794-542-1	TANK UNITS
794-543-1	TANK UNITS
794-544-1	TANK UNITS
794613-1	TANK UNITS
794614-1	FUEL PROBE
794-614-1	FUEL PROBE
794-777	TANK PROBE
794-777-1	TANK PROBE
794-819	TANK UNITS
794-936	TANK PROBE
794-937	TANK PROBE
794-938	TANK PROBE

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

794-992	TANK PROBE
796-428	ADAPTORS
796428-1	ADAPTORS
796-429-1	ADAPTORS
796429-2	ADAPTORS
796-430	ADAPTORS
796430-1	ADAPTORS
796-778-1	ADAPTORS
796-779-1	ADAPTORS
796815-02-03	PRESELECTOR (KGS)
798021-02-03	PRESELECTOR
798-038	TANK PROBE
7G1018	SWITCH GAGE PRESSRE
9914095-9	FUEL QUANTITY/TOTALIZER INDICATOR
B1175-3069	LIQ QTY TRANSMITTER
B1175-3076	LIQ QTY TRANSMITTER
B1176-3070	FUEL QTY TRANSMITTER
B1177-3071	LIQ QTY TRANSMITTER
B1177-3072	LIQ QTY TRANSMITTER
B1177-3073	LIQ QTY TRANSMITTER
B1177-3074	LIQ QTY TRANSMITTER
B1177-3075	LIQ QTY TRANSMITTER
B118-244	FUEL QTY INDICATOR
B175-30	FUEL TOTALIZER IND
B175-31	FUEL TOTALIZER IND
B222-35	FUEL QUANTITY IND
B353-18	FUEL QUANTITY INDCTR
FG1006AA01	FUEL QTY TANK ASSY
FG1006AA02	FUEL QTY TANK ASSY
FG1006AA03	FUEL QTY TANK ASSY
FG1006AA04	FUEL QTY TANK ASSY
FG1006AA05	FUEL QTY TANK ASSY
FG1006AA06	FUEL QTY TANK ASSY
FG1006AA07	FUEL QTY TANK ASSY
FG1006AA08	FUEL QTY TANK ASSY

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

FG1006AA09	FUEL QTY TANK ASSY
FG1006AA10	FUEL QTY TANK ASSY
FG1006AA12	FUEL QTY TANK ASSY
FG1006AA13	FUEL QTY TANK ASSY
FG1006AA14	FUEL QTY TANK ASSY
FG1006AA15	FUEL QTY TANK ASSY
FG1006AA16	FUEL QTY TANK ASSY
FG1006AA17	FUEL QTY TANK ASSY
FG1006AA52	FUEL QTY TANK UNIT ASSY
FG1006AA55	FUEL QTY TANK UNIT ASSY
FG1006AA59	FUEL QTY TANK UNIT ASSY
FG420A10	FUEL QTY TANK
FG420A11	FUEL QTY TANK
FG420A12	FUEL QTY TANK
FG420A13	FUEL TANK
FG420A14	FUEL QTY TANK
FG420A15	FUEL QTY TANK
FG420A16	FUEL QTY TANK
FG420A18	FUEL QTY TANK
FG420A19	FUEL QTY TANK
FG420A20	FUEL QTY TANK
FG420A21	FUEL QTY TANK
FG420A22	FUEL QTY TANK
FG420A23	FUEL QTY TANK
FG420A25	FUEL QTY TANK
FG420A26	FUEL QTY TANK
FG420A27	FUEL QTY TANK
FG420A28	FUEL QTY TANK
FG420A29	FUEL QTY TANK
FG420A30	FUEL QTY TANK
FG420A31	FUEL QTY TANK
FG420A32	FUEL QTY TANK
FG420A33	FUEL QTY TANK
FG420A34	FUEL QTY TANK
FG420A35	FUEL QTY TANK

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER DESCRIPTION

FG420A36	FUEL QTY TANK
FG420A37	FUEL QTY TANK
FG420A38	FUEL QTY TANK
FG420A39	FUEL QTY TANK
FG420A40	FUEL QTY TANK
FG420A41	FUEL QTY TANK
FG420A64	FUEL QTY TANK
FG420A65	FUEL QTY TANK
FG420A66	FUEL QTY TANK
FG420A72	FUEL QTY TANK
FG420A8	FUEL QTY TANK
FG420A9	FUEL QTY TANK
JG1208CA01	LOAD SELECT INDCTR
S345A001-001	FUEL QTY IND.
S345A001-005	PRESELECT INDCTR
S345A001-020	COMPENSATOR
S345A001-030	COMPENSATOR
S345N001-033	PROCESSOR
S345N001-132	FUEL QTY TANK UNITS
S345T001-401	FLEXI-STICK ASSY
S345T001-402	FLEXI-STICK ASSY
S345T001-403	FLEXI-STICK ASSY
S345T001-404	FLEXI-STICK ASSY
S345T001-406	FLEXI-STICK ASSY
S345T001-407	FLEXI-STICK ASSY
S345T001-408	FLEXI-STICK ASSY
S345T001-409	FLEXI-STICK ASSY
S345T002-130	FUEL QTY TANK ASSY
S345W101-1	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-10	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-11	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-12	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-2	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-3	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-4	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)

VELOCITY AEROSPACE - FQIS CAPABILITY

PART NUMBER	DESCRIPTION
-------------	-------------

S345W101-5	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-6	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-7	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-8	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
S345W101-9	FUEL LEVEL INDICATOR (FLEXI-STICK ASSY)
VSTLOC403C	FUEL QTY/TOTALIZER INDICATOR

9/1/2025